


G□□...SRS / SRM / ECN / EQN / EQI / C20


		06C □41	06F □41	06I □41	09D □41	09F □38	09H □41	09L □41	12D □20	12D □41	12H □15	12H □30	12H □35	12L □20	12L □41	
...SRS/SRM/ECN B0 ...EQN/EQI/C20 B0	Δ k	82			51			49								
...SRS/SRM/ECN P□ ...EQN/EQI/C20 P□	Δ k	100			71			69								
...S□□/E□□/C20	g ₂	□ 86			Ø 81			Ø 89								
...SR□ / E□□ / C40	k ₅	82			64			63								

		14D □15	14D □36	14H □15	14H □32	14L □15	14L □32	14P □14	14P □32	19F □14	19F □30	19J □14	19J □30	19P □14	19P □30	
...SRS/SRM/ECN B0 ...EQN/EQI/C20 B0	Δ k	50						49								
...SRS/SRM/ECN P□ ...EQN/EQI/C20 P□	Δ k	78						83			93					
...S□□/E□□/C20	g ₂	Ø 101														
...SR□ / E□□ / C40	k ₅	74						64								


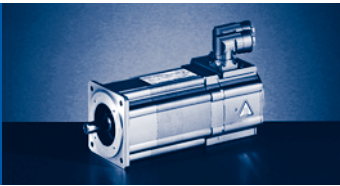


MCS & [mm]

Terminal box for motor connection

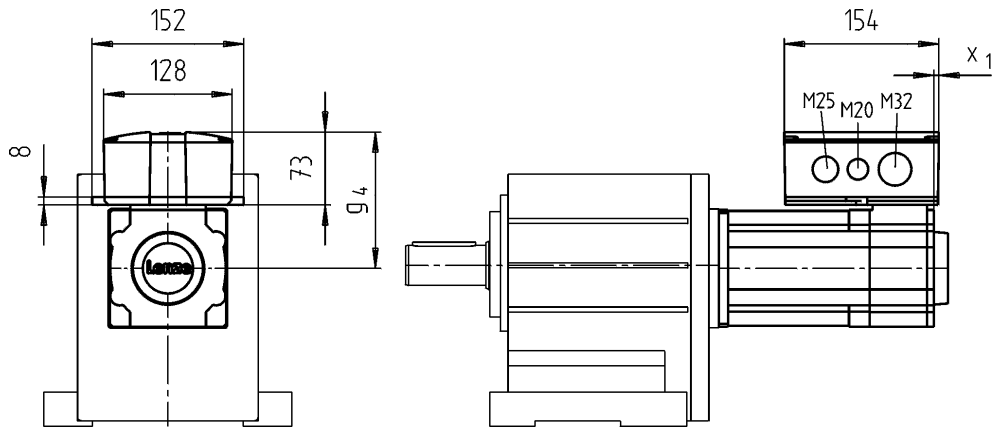


	09D □41	09F □38	09H □41	09L □41	12D □20	12D □41	12H □15	12H □30	12H □35	12L □20	12L □41			
δ_4	121				136									
x_1	8				5									
	14D □15	14D □36	14H □15	14H □32	14L □15	14L □32	14P □14	14P □32	19F □14	19F □30	19J □14	19J □30	19P □14	19P □30
δ_4	147							172						
x_1	3													

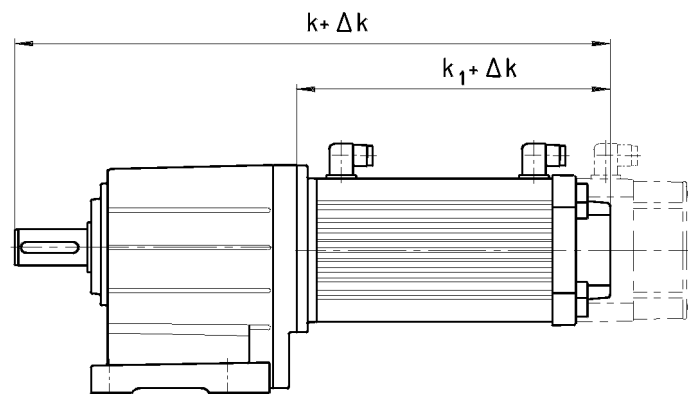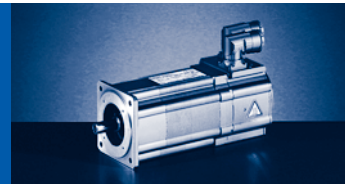


G□□...SRS / SRM / ECN / EQN / EQI / S20 / T20 / CDD

		10I □40 ...S00	13I □41 ...S00	13I □34 ...F10	14L □20 ...S00	14L □41 ...S00	14L □16 ...F10	14L □35 ...F10	17N □23 ...S00	17N □41 ...S00	
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δ k	54			55				54		
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δ k	79	89		88				89		
		17N □17 ...F10	17N □35 ...F10	19S □23 ...S00	19S □42 ...S00	19S □17 ...F10	19S □35 ...F10	21X □25 ...S00	21X □42 ...S00	21X □17 ...F10	21X □35 ...F10
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δ k	54		50				49			
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δ k	89		88				91			

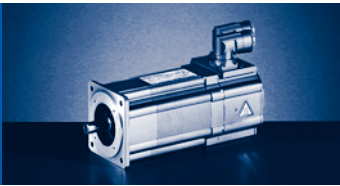


MCA & [mm]

Connectors for motor connection

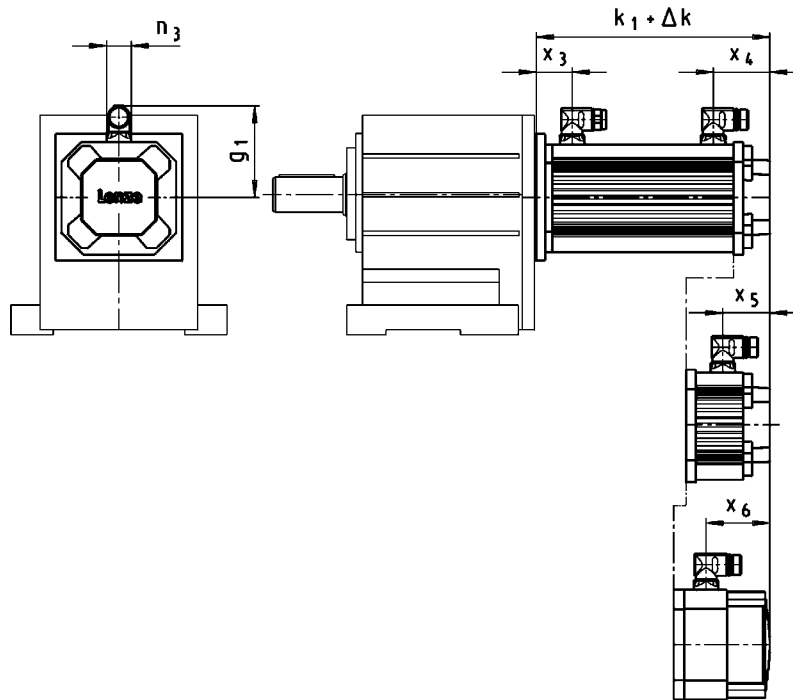

GST/GFL/GKR/GKS/GSS□□-□A

		10I C40 ...S00	13I C41 ...S00	13I C34 ...F10	14L C20 ...S00	14L C41 ...S00	14L C16 ...F10	14L C35 ...F10	17N C23 ...S00	17N C41 ...S00	
	k_1	258	267	335	307		369		346		
	g_1	90	102				109		118		
	n_3										28
	x_6	-		73	-		67		-		
...RSO B0	Δk										0
	x_3	33	41				46		49		
	x_4	61	65	133	73		135		73		
...RSO P□	Δk	25	35				33		35		
	x_3	55	68				73		81		
	x_4	61	65	133	73		135		73		
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δk	54					55		54		
	x_3	33	41				46		49		
	x_4	-	119	187	127		189		127		
	x_5										54
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	79	89				88		89		
	x_3	55	68				73		81		
	x_4	-	119	187	127		189		127		
	x_5										54

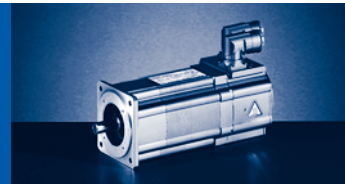

Connectors for motor connection


GST/GFL/GKR/GKS/GSS□□-□A

		17N C17 ...F10	17N C35 ...F10	19S C23 ...S00	19S C42 ...S00	19S C17 ...F10	19S C35 ...F10	21X C25 ...S00	21X C42 ...S00	21X C17 ...F10	21X C35 ...F10
	k_1	435		408		505		479		575	
	g_1	118			161				172		
	n_3	28					45				
	x_6	95		-		103		-		96	
...RSO B0	Δk					0					
	x_3	49			63				71		
	x_4	162		73		170		78		174	
...RSO P□	Δk	35			38				42		
	x_3	81			98				111		
	x_4	162		73		170		78		174	
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δk	54			50				49		
	x_3	49			63				71		
	x_4	216		123		220		126		222	
	x_5					-					
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	89			88				91		
	x_3	81			98				111		
	x_4	216		123		220		126		222	
	x_5					-					




MCA & [mm]

Connectors for motor connection

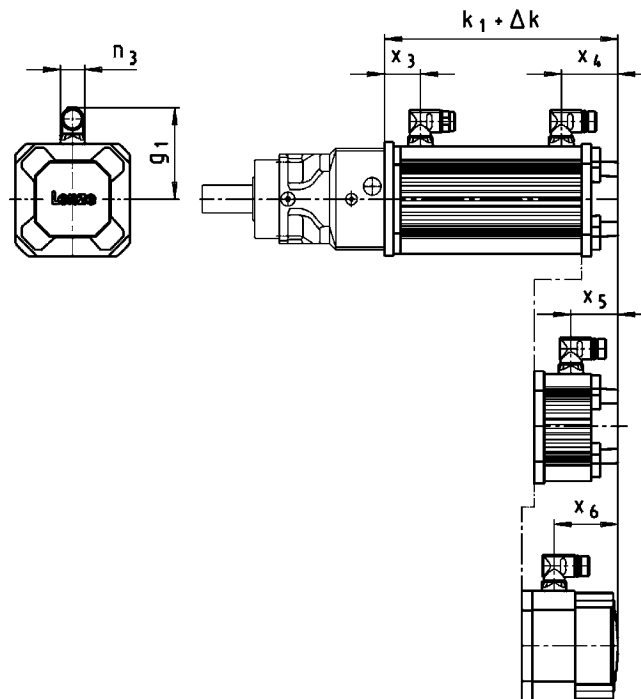

GPA□□-□A

		10I N40 ...S00	13I N41 ...S00	13I N34 ...F10	14L N20 ...S00	14L N41 ...S00	14L N16 ...F10	14L N35 ...F10	17N N23 ...S00	17N N41 ...S00
	k_1	262	271	339	302		364		340	
	g_1	90	102		109				118	
	n_3	28								
	x_6	-	73		-	67		-		
...RSO B0	Δk	0								
	x_3	37	45		41				43	
	x_4	61	65	133	73	135		73		
...RSO P□	Δk	25	35		33				35	
	x_3	59	72		68				75	
	x_4	61	65	133	73	135		73		
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δk	54			55				54	
	x_3	37	45		41				43	
	x_4	-	119	187	127	189		127		
	x_5	54	-							
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	79	89		88				89	
	x_3	59	72		68				75	
	x_4	-	119	187	127	189		127		
	x_5	54	-							

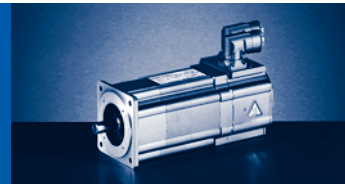

Connectors for motor connection


GPA□□-□A

		17N N17 ...F10	17N N35 ...F10	19S N23 ...S00	19S N42 ...S00	19S N17 ...F10	19S N35 ...F10	21X N25 ...S00	21X N42 ...S00	21X N17 ...F10	21X N35 ...F10
	k_1	429		401		498		470		566	
	g_1	118			161				172		
	n_3	28					45				
	x_6	95		-		103		-		96	
...RSO B0	Δk					0					
	x_3	43			56				62		
	x_4	162		73		170		78		174	
...RSO P□	Δk	35			38				42		
	x_3	75			91				102		
	x_4	162		73		170		78		174	
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δk	54			50				49		
	x_3	43			56				62		
	x_4	216		123		220		126		222	
	x_5					-					
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	89			88				91		
	x_3	75			91				102		
	x_4	216		123		220		126		222	
	x_5					-					




MCA & [mm]

Terminal box for motor connection

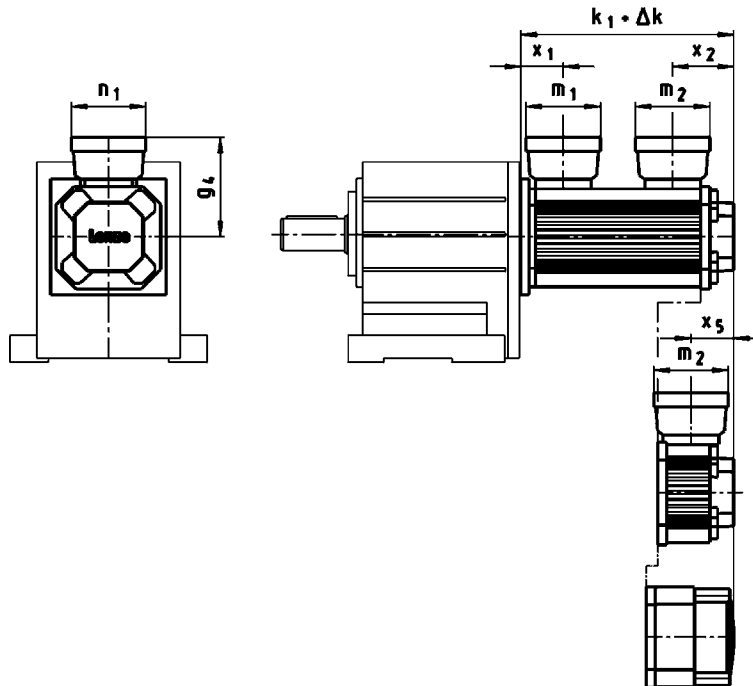

GST/GFL/GKR/GKS/GSS□□-□A

		10l C40 ...500	13l C41 ...500	13l C34 ...F10	14L C20 ...500	14L C41 ...500	14L C16 ...F10	14L C35 ...F10	17N C23 ...500	17N C41 ...500	
	k_1	258	267	335	307		369		346		
	g_4	113	125		132				140		
	m_1					93					
	m_2					93					
	n_1					93					
	x_1	60	53		58					61	
...RSO B0	Δk					0					
...RSO P□	x_2	78	77	145	85		147		85		
	Δk	25	35		33			35			
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	x_2	78	77	145	85		147		85		
	Δk	54		55			54				
	x_2	-	131	199	139		201		139		
	x_5	50					-				
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	79	89		88			89			
	x_2	-	131	199	139		201		139		
Terminal box in position 2 Cable glands in position 5	x_5	50					-				
						1 x M16x1.5		1 x M20x1.5			

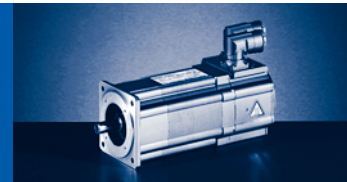


Terminal box for motor connection

GST/GFL/GKR/GKS/GSS□□-□A

		17N C17 ...F10	17N C35 ...F10	19S C23 ...S00	19S C42 ...S00	19S C17 ...F10	19S C35 ...F10	21X C25 ...S00	21X C42 ...S00	21X C17 ...F10	21X C35 ...F10
	k_1	435		408		505		479		575	
	g_4	140		158				169			
	m_1	93		120							
	m_2	93		93 ¹⁾ 120 ²⁾		93		93 ¹⁾ 120 ²⁾		93	
	n_1	93		109							
	x_1	61		80				93			
...RSO B0	Δk	0									
	x_2	174		93 ¹⁾ 87 ²⁾		190		97 ¹⁾ 92 ²⁾		193	
	Δk	35		38				42			
...RSO P□	x_2	174		93 ¹⁾ 87 ²⁾		190		97 ¹⁾ 92 ²⁾		193	
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δk	54		50				49			
	x_2	228		143 ¹⁾ 137 ²⁾		240		146 ¹⁾ 140 ²⁾		242	
	x_5	-									
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	89		88				91			
	x_2	228		143 ¹⁾ 137 ²⁾		240		146 ¹⁾ 140 ²⁾		242	
	x_5	-									
Terminal box in position 2 Cable glands in position 5		1 x M16x1.5 1 x M20x1.5		1 x M16x1.5 ¹⁾ 1 x M20x1.5 ¹⁾ 1 x M25x1.5 ²⁾ 1 x M32x1.5 ²⁾		1 x M16x1.5 1 x M20x1.5		1 x M16x1.5 ¹⁾ 1 x M20x1.5 ¹⁾ 1 x M25x1.5 ²⁾ 1 x M32x1.5 ²⁾		1 x M16x1.5 1 x M20x1.5	


1) IP 54

2) IP 65

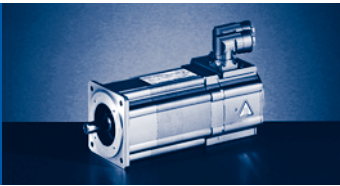


MCA & [mm]

Terminal box for motor connection

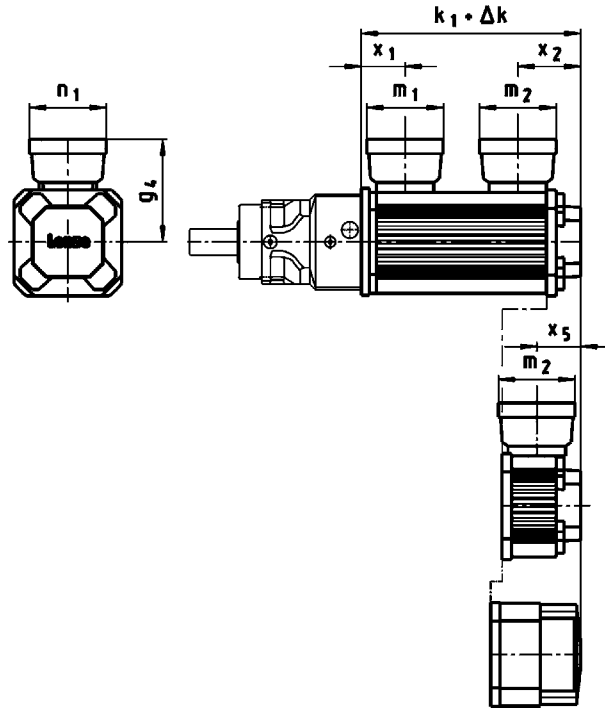

GPA□□-□A

		10I N40 ...S00	13I N41 ...S00	13I N34 ...F10	14L N20 ...S00	14L N41 ...S00	14L N16 ...F10	14L N35 ...F10	17N N23 ...S00	17N N41 ...S00	
	k_1	262	271	339	302		364		340		
	g_4	113	125		132				140		
	m_1					93					
	m_2					93					
	n_1					93					
	x_1	54	57		53				55		
...RSO B0	Δk					0					
	x_2	78	77	145	85		147		85		
...RSO P□	Δk	25	35		33				35		
	x_2	78	77	145	85		147		85		
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	Δk	54		55				54			
	x_2	-	131	199	139		201		139		
	x_5	50				-					
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	79	89		88				89		
	x_2	-	131	199	139		201		139		
	x_5	50				-					
Terminal box in position 2 Cable glands in position 5						1 x M16x1.5 1 x M20x1.5					

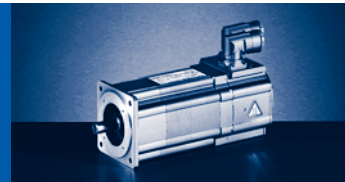

Terminal box for motor connection

GPA□□-□A


		17N N17 ...F10	17N N35 ...F10	19S N23 ...S00	19S N42 ...S00	19S N17 ...F10	19S N35 ...F10	21X N25 ...S00	21X N42 ...S00	21X N17 ...F10	21X N35 ...F10
	k_1	429		401		498		470		566	
	g_4	140		158			169				
	m_1	93		120							
	m_2	93		93 ¹⁾ 120 ²⁾		93		93 ¹⁾ 120 ²⁾		93	
	n_1	93		109							
	x_1	55		73			84				
...RSO B0	Δk			0							
	x_2	174		93 ¹⁾ 87 ²⁾		190		97 ¹⁾ 92 ²⁾		193	
	Δk	35		38			42				
...RSO P□	x_2	174		93 ¹⁾ 87 ²⁾		190		97 ¹⁾ 92 ²⁾		193	
	Δk	54		50			49				
...SRS/SRM/ECN/EQN B0 ...EQI/S20/T20/CDD B0	x_2	228		143 ¹⁾ 137 ²⁾		240		146 ¹⁾ 140 ²⁾		242	
	x_5			-							
...SRS/SRM/ECN/EQN P□ ...EQI/S20/T20/CDD P□	Δk	89		88			91				
	x_2	228		143 ¹⁾ 137 ²⁾		240		146 ¹⁾ 140 ²⁾		242	
Terminal box in position 2 Cable glands in position 5	x_5			-							
		1 x M16x1.5 1 x M20x1.5		1 x M16x1.5 ¹⁾ 1 x M20x1.5 ¹⁾ 1 x M25x1.5 ²⁾ 1 x M32x1.5 ²⁾		1 x M16x1.5 1 x M20x1.5		1 x M16x1.5 ¹⁾ 1 x M20x1.5 ¹⁾ 1 x M25x1.5 ²⁾ 1 x M32x1.5 ²⁾		1 x M16x1.5 1 x M20x1.5	

1) IP 54

2) IP 65



MCA & [mm]

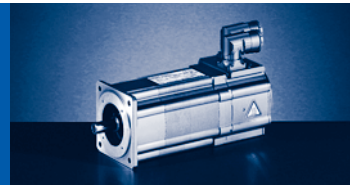



Lenze SE
Postfach 10 13 52
D-31763 Hameln
Telefon +49 (0)51 54 / 82-0
Telefax +49 (0)51 54 / 82-28 00
E-Mail: Lenze@Lenze.de
Internet: www.Lenze.com

Lenze Automation GmbH
Grünstraße 36, D-40667 Meerbusch
Telefon +49 (0)21 32 / 99 04-0
Telefax +49 (0)21 32 / 7 21 90

Standort:
Hans-Lenze-Straße 1, D-31855 Aerzen
Postfach 101352, D-31763 Hameln
Telefon +49 (0)51 54 / 82-0
Telefax +49 (0)51 54 / 82-28 00

Standort:
Am Alten Bahnhof 11
D-38122 Braunschweig
Telefon +49 (0)531 / 80178-0
Telefax +49 (0)531 / 80178-20

Lenze Drives GmbH
Postfach 10 13 52, D-31763 Hameln
Breslauer Straße 3, D-32699 Extertal
Telefon +49 (0)51 54 / 82-0
Telefax +49 (0)51 54 / 82-28 00

Lenze Operations GmbH
Postfach 10 13 52, D-31763 Hameln
Hans Lenze Straße 1, D-31855 Aerzen
Telefon +49 (0)51 54 / 82-0
Telefax +49 (0)51 54 / 82-28 00

Lenze GmbH & Co KG Anlagenbau
Buchenweg 1
D-31855 Aerzen
Telefon +49 (0)51 54 / 82-0
Telefax +49 (0)51 54 / 82-21 00

Lenze Service GmbH
Breslauer Straße 3
D-32699 Extertal

Mechanical Drives
Telefon +49 (0)51 54 / 82-16 26
Telefax +49 (0)51 54 / 82-13 96

Electronic Drives
Telefon +49 (0)51 54 / 82-11 11
Telefax +49 (0)51 54 / 82-11 12

Service Helpline
+49 (0)180 5 20 24 26

Lenze Verbindungstechnik GmbH
Ipf-Landesstraße 1
A-4481 ASTEN
Telefon +43 (0)72 24 / 210-0
Telefax +43 (0)72 24 / 210-998

Lenze DETO Drive Systems GmbH & Co KG
Untere Sparchen 16
A-6330 Kufstein
Telefon +43 (0)53 72 / 6 53 15-200
Telefax +43 (0)53 72 / 6 53 15-299

Schmidhauser AG
Obere Neustrasse 1
CH-8590 Romanshorn
Telefon +41 (0)71 466 11 11
Telefax +41 (0)71 466 11 10

encoway GmbH
Buschhöhe 2
D-28357 Bremen
Telefon +49 (0)4 21 / 33003 - 500
Telefax +49 (0)4 21 / 33003 - 555

DEUTSCHLAND/GERMANY

Lenze Vertrieb GmbH *
Ludwig-Erhard-Straße 52-56
D-72760 Reutlingen
Telefon +49 (0)71 21 / 9 39 39-0
Telefax +49 (0)71 21 / 9 39 39-29

Region Nord
HefeHof 25
31785 Hameln
Telefon (0 51 54) 82 44-0
Telefax (0 51 54) 82 44-44

Region West
Postfach 10 12 20
47497 Neukirchen-Vluyn
Kelvinstraße 7
47506 Neukirchen-Vluyn
Telefon (0 28 45) 95 93-0
Telefax (0 28 45) 95 93 93

Region Mitte/Ost
Postfach 1463
35724 Herborm
Austraße 81
35745 Herborm
Telefon (0 27 72) 95 94-0
Telefax (0 27 72) 95 94 94

Region Südwest
Postfach 14 33
71304 Waiblingen
Schänzle 8
71332 Waiblingen
Telefon (0 71 51) 9 59 81-0
Telefax (0 71 51) 9 59 81 50

Region Süd
Fraunhoferstraße 16
82152 Martinsried
Telefon (0 89) 89 56 14-0
Telefax (0 89) 89 56 14 14

WELTWEIT/WORLDWIDE

ALGERIA
see FRANCE

ARGENTINA *
E.R.H.S.A.
Girardot 1368, 1427 BUENOS AIRES
Phone +54 (0)11 / 45 54 32 32
Telefax +54 (0)11 / 45 52 36 11

AUSTRALIA *
FCR Motion Technology Pty. Ltd.
Unit 6, Automation Place
38-40 Little Boundary Rd.
LAVERTON NORTH, Vic. 3026
Phone +61 (3) 9362 6800
Telefax +61 (3) 9314 3744

AUSTRIA *
Lenze Antriebstechnik GmbH
Ipf-Landesstraße 1
4481 ASTEN
Phone +43 (0)7224 / 210-0
Telefax +43 (0)7224 / 210-999

Office Dornbirn:
Lustenauer Straße 64
6850 DORNBRN
Phone +43 (0)7224 / 210-0
Telefax +43 (0)7224 / 210-7299

Office Wr. Neudorf:
Triester Straße 14/109
2351 WR. NEUDORF
Phone +43 (0)7224 / 210-0
Telefax +43 (0)7224 / 210-7099

Office Graz:
Seering 8
8141 UNTERPREMSTÄTTEN
Phone +43 (0)7224 / 210-0
Telefax +43 (0)7224 / 210-7199

Lenze Verbindungstechnik GmbH
Ipf-Landesstraße 1
4481 ASTEN
Phone +43 (0)7224 / 210-0
Telefax +43 (0)7224 / 210-998

Lenze Anlagentechnik GmbH
Mühlenstraße 3
4470 ENNS
Phone +43 (0)7224 / 210-0
Telefax +43 (0)7224 / 210-997

BELARUS

see POLAND

BELGIUM *

Lenze bv.ba
Industriepark Noord, 19.
9100 SINT-NIKLAAS
Phone +32 (0)3.542.62.00
Telefax +32 (0)3.541.37.54

BOSNIA-HERZEGOVINA

see AUSTRIA

BRAZIL *

Lenze Brasil Automação Ltda.
Rua Conde Moreira Lima 589
CEP 04384-030
SÃO PAULO/SP – Brasil
Phone +55 11 2348-6579
Telefax +55 11 2348-6573

Produtos Eletrônicos Metaltex Ltda (Focus on Sales)
Rua José Rafaelli, 221
Socorro, CEP 04763-280
SÃO PAULO/SP – Brasil
Phone +55 11 56 83 57 00
Telefax +55 11 55 24 23 24

BULGARIA

Lenze Zadvizhvasta Tehnika EOOD
Bul. Maritza 21, Office 204
4003 PLOVDIV
Phone +359 / 32 / 940 373
Telefax +359 / 32 / 940 349

CANADA *

Lenze Canada Corporation
1535 Meyerside Drive, Unit 1
Mississauga, ON L5T 1M9 CANADA
Phone +1 (508) 278-9100
Telefax +1 (508) 278-7873

CENTRAL AMERICA

see Americas HQ

CHILE

Sargent S.A.
Tecnica Thomas C. Sargent
Av. Gral. Velásquez 5720, San Bernardo
SANTIAGO – CHILE
Phone +56 (0)2 / 51 03 000
Telefax +56 (0)2 / 69 83 989

CHINA *

Lenze Drive Systems (Shanghai) Co. Ltd.
No. 2989, Jiangshan Road
Lingang, Shanghai 201306
CHINA
Phone +86 21 3828 0200
Telefax +86 21 3828 0250

COLOMBIA

Casa Sueca, S.A.
Calle 52 1N-74
CALI
Phone +57 -2- 682 0444
Telefax +57 -2- 683 1411

CROATIA

Lenze mehatronika-pogonska tehnika d.o.o.
Ulica grada Gospića 3
HR-10000 ZAGREB
Phone +385 1 249-8056
Telefax +385 1 249-8057

CZECH REPUBLIC

Lenze, s.r.o.
Central Trade Park D1
396 01 HUMPOLEC
Phone +420 565 507-111
Telefax +420 565 507-399

Büro Červený Kostelec:
17. listopadu 510
549 41 ČERVENÝ KOSTELEČ
Phone +420 491 467-111
Telefax +420 491 467-166

DENMARK *

Lenze A/S
Vallensbækvej 18A
2605 BRØNDBY
Phone +45 / 4696 6666
Telefax +45 / 4696 6660
24 stunde service +45 / 5251 6699

Buero Jylland: Lenze A/S
Niels Bohrs Vej 23
8660 SKANDERBORG
Phone +45 / 46 96 66 88
Telefax +45 / 46 96 66 80

EGYPT

WADI Co. for technologies and development
P.O.Box 209, new center Ramses
11794 CAIRO, Egypt
11 Syria St., Mohandessin
GIZA, Egypt
Phone +2 (02) 3347 6842
Telefax +2 (02) 3347 6843

ESTONIA

see FINLAND

FINLAND *

Lenze Drives
Tierankatu 8, 20520 TURKU
Phone +358 2 2748 180
Telefax +358 2 2748 189

FRANCE *

Lenze S.A.
Siège
21 des Mardelles
44 Rue Blaise Pascal
93600 AULNAY-SOUS-BOIS

Services Commerciaux
Phone 0 825 086 036
Telefax 0 825 086 346

Centre de formation
E-Mail : semin.sidonie@lenze.fr

Questions générales / documentation
E-Mail : info@lenze.fr

Service Après-vente / assistance en ligne
Helpline 24/24 : 0 825 826 117
E-Mail : helpline@lenze.fr

Agences en France
Région France Nord :
21 des Mardelles
44 Rue Blaise Pascal
93600 AULNAY-SOUS-BOIS

Nantes
44000 NANTES

Strasbourg
67870 GRIESHEIM près MOLSHEIM

Rouen
76500 ELBEUF

Région France Sud :
Parc Technologique
97, allée Alexandre Borodine
Immeuble le Douglas 2
69800 SAINT PRIEST

Agen
47270 SAINT-PIERRE de CLAIRAC

GREECE

GEORGE P. ALEXANDRIS SA
12, K. Mavromichali Street
18545 PIRAEUS
Phone +30 210 41 11 841
Telefax +30 210 41 27 058

Industrial Area, Block 48B, 4th Entrance
57022 SINDOS
Phone +30 2310 556 650
Telefax +30 2310 511 815

HUNGARY *

Lenze Hajtástechnika Kft
2040 BUDAÖRS
Gyár utca 2., P.O.Box 322.
Phone +36 (0)23 / 501-320
Telefax +36 (0)23 / 501-339

ICELAND

see DENMARK



INDIA

Lenze Mechatronics Pvt. Ltd.
Lenze Plot No. 46A, Sector-10
PCNTDA Industrial Area, Bhosari
PUNE - 411 026
Phone +91-20-66318100
Telefax +91-20-66318120

Kolkata Sales office
2nd Floor, 3/1 Ashton Road
KOLKATA - 700020
Phone +91-33-24190490
Telefax +91-33-24190562

New Delhi Sales office
Flat No - 101, Padma Tower - II
22, Rajendra Place
NEW DELHI - 110008
Phone +91-11-25812113/15
Telefax +91-11-25812114

INDONESIA

see MALAYSIA

IRAN

Tavan Ressian Co.
No.5, Alizadeh Alley,
North Bahar Str.,
Sadr Highway,
Tehran-1931813556-Iran
P.O. Box 19395-5177 Teh-IR
Phone +98 21 / 2769 4444
Telefax +98 21 / 222 444 00

ISRAEL *

Zeev Melcer LTD
P.O.B. 10011, HAIFA BAY 26110
36 Yosef Levi St., Kiriat Bialik
Phone +972-(0)4-8757037
Telefax +972-(0)4-8742172

ITALY *

Lenze Italia S.r.l.
Viale Monza 338, 20128 MILANO
Phone +39 02 / 270 98.1
Telefax +39 02 / 270 98 290

JAPAN *

Miki Pulley Co., Ltd.
1-39-7 Komatsubara, Zama-city
KANAGAWA 228-8577
Phone +81 (0)462 / 58 16 61
Telefax +81 (0)462 / 58 17 04

LATVIA

see LITHUANIA

LEBANON

I. Network Automation s.a.l.
Ground floor - United insurance building
Facing Mercedes Show room
Dora - High Way, BEIRUT-METEN
P.O.Box 835 - Jounieh - Lebanon
Phone +961-1-249562
Telefax +961-1-249563

LITHUANIA

Lenze UAB
Breslaujos g.3, 44403 KAUNAS
Phone +370 37 407174
Telefax +370 37 407175

LUXEMBOURG *

see BELGIUM

MACEDONIA

Lenze Antriebsstechnik GmbH
Pretstavništvo Skopje
ul. Nikola Rusinski 3/A/2, 1000 SKOPIJE
Phone +389 2 30 90 090
Telefax +389 2 30 90 091

MALAYSIA

Lenze S.E.A. Sdn Bhd
No. 28 Jalan PJU 3/47
Sunway Damansara, Technology Park
47810 PETALING JAYA
SELANGOR DARUL EHSAN
Phone +60 3 7803 1428
Telefax +60 3 7806 3728

MAURITIUS

Automation & Controls Engineering Ltd
3, Royal Road, Le Hochet, Terre Rouge
MAURITIUS
Phone +230 248 8211
Telefax +230 248 8968

MEXICO

Sales:
see AMERICAS HQ

Service:
**Automatización y Control
de Energía S.A. de C.V.**
Av. 2 No.89 Esq Calle 13
Col. San Pedro de los Pinos
C.P. 03800 MEXICO D.F.
Phone +52 55 2636-3540
Fax +52 55 2636-3541

MONTENEGRO

see MACEDONIA

MOROCCO

GUORFET G.T.D.R
Automatisation Industrielle
Bd Chefchaouni Route 110 km, 11.500
No. 353-Ain-Sabaâ
CASABLANCA
Phone +212/22-35 70 78
Telefax +212/22-35 71 04

NETHERLANDS *

Lenze B.V., Postbus 31 01
5203 DC 'S-HERTOGENBOSCH
Ploegweg 15
5232 BR 'S-HERTOGENBOSCH
Phone +31 (0)73 / 64 56 50 0
Telefax +31 (0)73 / 64 56 51 0

NEW ZEALAND *

Tranz Corporation
343 Church Street
P.O. Box 12-320, Penrose
AUCKLAND
Phone +64 (0)9 / 63 45 51 1
Telefax +64 (0)9 / 63 45 51 8

NORWAY *

Dtc- Lenze as
Stallbakken 5, 2005 RAEILINGEN
Phone +47 / 64 80 25 10
Telefax +47 / 64 80 25 11

PHILIPPINES

see MALAYSIA

POLAND

Lenze Polska Sp. z o.o.
Ul. Rozdzeńskiego 188b
40-203 KATOWICE
Phone +48 (0) 32 203 97 73
Telefax +48 (0) 32 781 01 80

Torun Office
Lenze Polska Sp. z o.o.
Ul. Rydygiera 47
87-100 TORUN
Phone +48 (0) 56 658 28 00
Telefax +48 (0) 56 645 33 56

PORTUGAL *

Costa Leal el Victor
Electronica-Pneumatica, Lda.
Rua Prof. Augusto Lessa, 269,
Apart. 52053
4202-801 PORTO
Phone +351-22 / 5 50 85 20
Telefax +351-22 / 5 02 40 05

ROMANIA

see AUSTRIA

RUSSIA

OOO Lenze
Shchelkovskoye shosse 5
105122 MOSCOW
Phone +7 495 921 3250
Telefax +7 495 921 3259

SERBIA

see MACEDONIA

SINGAPORE *

see MALAYSIA

SLOVAC REPUBLIC

ECS Sluzby spol. s.r.o.
Staromlynska 29
82106 BRATISLAVA
Phone +421 2 45 25 96 06
+421 2 45 64 31 47
+421 2 45 64 31 48
Telefax +421 2 45 25 96 06

SLOVENIA

LENZE GmbH, Asten, Avstrija
Podružnica Celje
Kidričeva 24
3000 CELJE
Phone +386 03 426 46 40
Telefax +386 03 426 46 50

SOUTH AFRICA *

S.A. Power Services (Pty.) Ltd.
Unit 14, Meadowbrook Business Estates
Jacaranda Ave, Olivedale
Randburg 2158, P.O.Box 1137
RANDBURG 2125
Phone +27(11) 462-8810
Telefax +27(11) 704-5775

SOUTH KOREA *

Lenze Representative Office
No. 606, Daeryung Technotown 6th,
493-6, Gasan-dong, Geumcheon-gu,
SEOUL 153-774
Phone +82 2-792-7017
Telefax +82 2-792-7018

SPAIN *

Lenze Transmisiones S.A.
Edificio TCA
C/ Henri Dunant, 9,
08173 SANT CUGAT DEL VALLÉS
(Barcelona)
Phone 902 02 79 04
(0034) 937 207 680
Telefax 902 02 63 69

Lenze Delegación Norte
Phone 902 02 79 04
(0034) 937 207 680

Lenze Delegación Levante
Cullera, 73-4ºD
46035 BENIMAMET (Valencia)
Phone 902 02 79 04
(0034) 937 207 680
Telefax 902 02 63 69

Lenze Delegación Madrid
C/ Poema Sinfónico Nº 25-27
Local nº 3, escalera 1, Planta Baja.
28054 MADRID
Phone 915 103 341
Telefax 915 102 061

SWEDEN *

Lenze Transmissioner AB
P.O.Box 10 74, Attorpsgatan, Tornby Ind.
58110 LINKÖPING
Phone +46 (0)13 / 35 58 00
Telefax +46 (0)13 / 10 36 23

SWITZERLAND *

Lenze Bachofen AG
Ackerstrasse 45
8610 USTER
Phone +41 (0) 43 399 14 14
Telefax +41 (0) 43 399 14 24

Vente Suisse Romande:
Route de Prilly 25
1023 CRISSIER
Phone +41 (0)21 / 63 72 19 0
Telefax +41 (0)21 / 63 54 76 2

SYRIA

Zahabi Co.
8/5 Shouhadada Street
P.O.Box 8262
ALEPPO-SYRIA
Phone +963 21 21 22 23 5
Telefax +963 21 21 22 23 7

TAIWAN *

Lenze Taiwan Representative Office
6F-1, No.136, Sec. 3, Zhongxiao E. Rd.
TAIPEI City, 10655, Taiwan
Phone +886 / (0)2-2721-2161
Telefax +886 / (0)2-2721-2706

THAILAND

see MALAYSIA

TUNESIA

AMF Industrielle Sarl
Route de Gremda - Km 0,2
Immeuble El Madina,
Centre Bloc B - 5 ère - appt 52
3002 SFAX
Phone +216 74 403 514
Telefax +216 74 402 516

TURKEY

LSE Elektrik
Elektronik Makina
Otomasyon Mühendislik
Sanayi ve Ticaret Ltd. Şti
Atatürk mah. Cumhuriyet cad.
Yurt sok. No: 7
ÜMRANIYE/İSTANBUL
Phone +90 (0)216 / 316 5138 pbx
Telefax +90 (0)216 / 443 4277

UKRAINE

SV Altera, Ltd.
Lepse ave., 4
KIEV, 03067
Phone +38 044 496 18 88
Telefax +38 044 496 18-18

UNITED ARAB EMIRATES

LPT (FZC)
X4 Building No. 37
Sharjah Airport Free Zone (SALF ZONE)
SHARJAH
Phone +971 6 5573205
Telefax +971 6 5573206

UNITED KINGDOM/EIRE *

Lenze Ltd.
Fraser Road
Priory Business Park
BEDFORD MK44 3WH
Phone +44 (0)1234 / 75 32 00
Telefax +44 (0)1234 / 75 32 20

USA *

AMERICAS HQ
Lenze Americas Corporation
630 Douglas Street
UXBRIDGE, MA 01569
Phone +1 508 278 9100
Telefax +1 508 278 7873

Sales:
see Americas HQ

Operations:
Lenze AC Tech Corporation
630 Douglas Street
UXBRIDGE, MA 01569
Phone +1 508 278 9100
Telefax +1 508 278 9294

Lenze DETO Drive Systems
see Americas HQ

VIETNAM

see MALAYSIA

* Countries connected to the free expert helpline 008000 24 hours (008000 24 46877)

It's good to know | why we are there for you



"Our customers come first. Customer satisfaction is what motivates us. By thinking in terms of how we can add value for our customers we can increase productivity through reliability."



"We will provide you with exactly what you need – perfectly co-ordinated products and solutions with the right functions for your machines and installations. That is what we mean by 'quality'."



"Take advantage of our wealth of expertise. For more than 60 years now we have been gathering experience in various fields and implementing it consistently and rigorously in our products, motion functions and pre-configured solutions for industry."



"The world is our marketplace. Wherever you are in the world, we are nearby, providing you with our drive and automation solutions."

Algeria · Argentina · Australia · Austria · Belarus · Belgium · Bosnia-Herzegovina · Brazil · Bulgaria · Canada · Central America · Chile · China · Colombia · Croatia · Czech Republic · Denmark · Egypt · Estonia · Finland · France · Germany · Greece · Hungary · Iceland · India · Indonesia · Iran · Israel · Italy · Japan · Latvia · Lebanon · Lithuania · Luxembourg · Macedonia · Malaysia · Mauritius · Mexico · Montenegro · Morocco · Netherlands · New Zealand · Norway · Philippines · Poland · Portugal · Romania · Russia · Serbia · Singapore · Slovak Republic · Slovenia · South Africa · South Korea · Spain · Sweden · Switzerland · Syria · Taiwan · Thailand · Tunisia · Turkey · Ukraine · United Arab Emirates · United Kingdom/Eire · USA · Vietnam

You can rely on our service. Expert advice is available 24 hours a day, 365 days a year, in more than 30 countries via our international helpline: 008000 24 Hours (008000 2446877).